



Margarita Machine Instructions

Operating Instructions:

- Plug directly into a 15 amp outlet. Do not use extension cords.
- Ensure the clear hopper is seated properly on the machine.
- Pour ½ gallon mix and 2 gallons cool water in hopper, no higher than the max fill line of 2.5 gallons.
- Ensure the cover is properly replaced.
- Turn on the machine "Lightning Bolt" switch and the light "Light Bulb" switch
- Each side of the machine is operated separately. Turn on the rotate "Round Arrow" switch and the freeze "Snowflake" switch.
- Do not adjust the timer.
- After 90 minutes or more, the mix may be dispensed by pulling the lever forward.
- After use, turn off the machine and rinse out with water.

Tips for success:

- Plug directly into a 15 amp outlet. Do not use extension cords!
- Do not use in direct sun or in excessively warm areas.
- Allow at least two hours of operation before serving, especially if alcohol is added to the mix.
- Alcohol lowers the freezing temperature and results in longer freezing times. To expedite serving a frozen product, alcohol may be added after the mix has been dispensed rather than adding it to the mix hopper.
- If more than 2.5 gallons of mix will be needed, do not dispense all of the frozen mix and start over. Instead, combine additional mix and cool water in a separate container and add to the frozen mix as needed.
- Use mix designed for use with this machine. Improper levels of sugar may result in inconsistent results or damage to the machine.
- Do not add ice to the hopper. It will damage the machine.