


UNITED RENT-ALL

811 South 48th Street - Omaha, NE 68106 - Phone: 402-556-1600 - Fax: 402-556-9436

COFFEE MAKER INSTRUCTIONS

- 1) With basket and stem removed, check to see that spigot is closed and fill urn with COLD, FRESH WATER. Marks on inside of coffee maker show water level for number of cups desired.
- 2) Press stem into heating unit (make sure it is well seated) in bottom of coffee maker; put basket on stem. Put desired amount of coffee in basket and spread evenly in basket. See chart below for desired amount of coffee.
- 3) Place cover tightly on coffee maker.
- 4) Plug cord into a 120 volt AC grounded electric outlet only. This rental item must be used on an isolated electrical circuit. This item will not operate properly on a shared circuit.

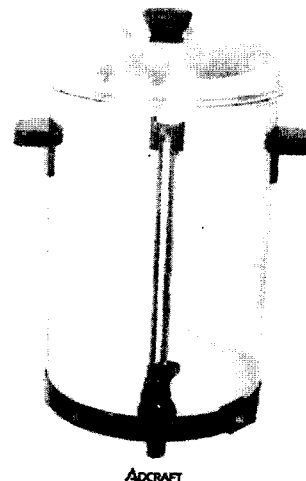

- 5) Turn coffee maker on.
- 6) Coffee maker will stop percolating automatically. Coffee will remain at serving temperature as long as coffee maker is plugged in and switch is turned on. For best flavor, use a hot pad and remove basket with the coffee grounds and stem before serving. CAUTION: COFFEE MAKER AND PARTS WILL BE HOT!
- 7) When about three cups of coffee remain in urn, turn off coffee maker and unplug from wall outlet.
- 8) TO CLEAN: Make sure coffee maker is unplugged from wall outlet and allow urn to cool. Rise coffee maker, basket and stem with water and a mild detergent. NEVER IMMERSE COFFEE MAKER IN WATER. Rise all parts and dry.

HOW MUCH COFFEE TO USE FOR 100 CUP COFFEE MAKER:

<u>Water Level</u>	<u>Strong</u>	<u>Mild</u>
100 cups	8 cups	6 ¼ cups
80 cups	6 ½ cups	5 cups
60 cups	5 cups	4 cups
40 cups	3 ½ cups	2 ½ cups

Do not make less than 40 or more than 100 cups of coffee at one time

HOW MUCH COFFEE TO USE FOR 55 CUP COFFEE MAKER:

<u>Water Level</u>	<u>Strong</u>	<u>Mild</u>
55 cups	5 cups	3 ½ cups
45 cups	4 cups	2 ½ cups
35 cups	3 ¼ cups	1 ¼ cups
24 cups	2 ¼ cups	1 cup

Do not make less than 24 or more than 55 cups of coffee at one