



Microphone Troubleshooting:

- Flip the Main Power Button to ON (#28)
- Push the UHF Wireless Microphone button ON (#17)
- Flip the Microphone Power Switch to ON (found on the microphone)
- Turn the Microphone Volume to desired level (#20 & #21)
- Turn the Main Mic Volume to desired level (#8)
- Turn the Master Volume to desired level (#6)